



THE TIME & TEMPERATURE COMPANY™

Freshness Timer


Counts 300 minutes by seconds
in 5-minute increments

Features

- Counts up & down
- Extra long & loud alarm
- 5 & 3 minute warning alarms
- Last count recall
- Food-safe ABS plastic
- 2-way mounting: flexible plastic band/
Velcro® band
- Battery and instructions included

Patent Pending

Note: Remove sticker from display before use.

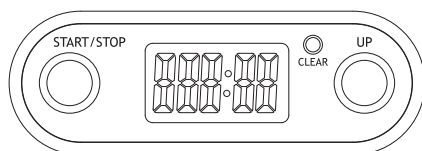

Note: In the following instructions, names of the control buttons are shown in CAPS. Function information that appears on the display is shown in **BOLD CAPS**.

Battery Installation

Battery is installed. Remove plastic tab to allow power. Replace battery when LCD becomes dim or alarm level declines.

1. Remove battery cover on the back with a coin.
2. Install one LR44 battery with positive (+) side up.
3. Replace the battery cover.

Operating Instructions

A. Mount Timer

As a matter of safety, mount timer to carafe before filling with liquid or brewing beverage.

1. **Flexible Plastic Band (Coffee Pots)**
 - a. Fit plastic band around the neck of the coffee pot, bent tongue facing handle.
 - b. Fit larger bottom end of slot (located in the clip on the back of the timer) over the knob on the bent tongue and gently pull down in the direction of the arrow to lock in place.
2. **Velcro® Band (Air Pots)**
 - a. Slide the center of the Velcro® band under the clip on the back of the timer.
 - b. Wrap the Velcro® band around air pot handle.

B. Count Down

1. Press the UP button to enter the desired time in 5-minute increments. Press and hold for fast advance.
2. Press the START/STOP button to start counting down.
3. The alarm sounds for 10 minutes when the count reaches **000:00**.
4. Press START/STOP to stop the alarm. The last count is recalled.
5. Press the CLEAR button to reset to **000:00**.

C. Count Up

1. When timer is stopped, press the CLEAR button to reset to **000:00**.
2. Press the START/STOP button to begin the count up.
3. Press the START/STOP button to stop the count.
4. Press the CLEAR button to reset to **000:00**.

Care of Your Product

- Avoid exposing your timer to extreme temperatures, water or severe shock.
- Avoid contact with any corrosive materials such as perfume, alcohol or cleaning agents.
- Wipe clean with a damp cloth.

The information in this document has been reviewed and is believed to be accurate. However, neither the manufacturer nor its affiliates assume any responsibility for inaccuracies, errors or omissions that may be contained herein. In no event will the manufacturer or its affiliates be liable for direct, indirect, special, incidental or consequential damages arisen by using this product or resulting from any defect/omission in this document, even if advised of the possibility of such damages. The manufacturer and its affiliates reserve the right to make improvements or changes to this document and the products and services described at any time, without notice or obligation.



5-Year Limited Warranty: Any instrument that proves to be defective in material or workmanship within five years of original purchase will be repaired or replaced without charge upon receipt of the unit prepaid at: CDN, PO Box 10947, Portland, OR 97296-0947. This warranty does not cover damage in shipment or failure caused by tampering, obvious carelessness or abuse.



Component Design Northwest, Inc.
PO Box 10947
Portland, OR 97296-0947
Tel 800 338-5594
Fax 800 879-2364
Web www.cdn-timeandtemp.com

