


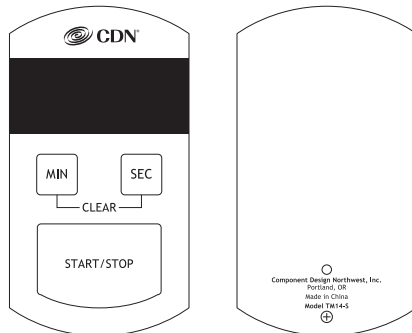

Features

- Counts up & down
- Stop and restart
- Last count recall
- ABS plastic
- Magnet mount
- Battery and instructions included

Note: Remove sticker from display before use.



Note: In the following instructions, names of the control buttons are shown in CAPS. Function information that appears on the display is shown in **BOLD CAPS**.

Battery Installation

The battery is installed. Remove plastic tab to allow power. Replace battery when LCD becomes dim or alarm level declines.

1. Remove battery cover on the back with a coin.
2. Install one LR44 battery, positive (+) side up.
3. Replace the battery cover.

Operating Instructions

A. Count Down

1. Press the MIN and/or SEC buttons to enter the desired time. Press and hold for fast advance.
2. Press the START/STOP button to start counting down. **M** and **S** flash on the display.
3. Press the START/STOP button to interrupt the count. Press START/STOP again to resume the count.
4. The alarm sounds for 30 seconds when the count reaches **00:00**.
5. Press START/STOP to stop the alarm. The last count is recalled.
6. Press both MIN and SEC buttons simultaneously to reset to **00:00**.

B. Count Up

1. When timer is stopped, press both MIN and SEC buttons simultaneously to reset to **00:00**.
2. Press the START/STOP button to start counting up. **M** and **S** flash on the display.
3. Press the START/STOP button to interrupt the count. Press START/STOP again to resume the count.
4. Press both MIN and SEC buttons simultaneously to reset to **00:00**.

Care of Your Product

- Avoid exposing your timer to extreme temperatures, water or severe shock.
- Avoid contact with any corrosive materials such as perfume, alcohol or cleaning agents.
- Wipe clean with a damp cloth.

The information in this document has been reviewed and is believed to be accurate. However, neither the manufacturer nor its affiliates assume any responsibility for inaccuracies, errors or omissions that may be contained herein. In no event will the manufacturer or its affiliates be liable for direct, indirect, special, incidental or consequential damages arisen by using this product or resulting from any defect/omission in this document, even if advised of the possibility of such damages. The manufacturer and its affiliates reserve the right to make improvements or changes to this document and the products and services described at any time, without notice or obligation.



5-Year Limited Warranty: Any instrument that proves to be defective in material or workmanship within five years of original purchase will be repaired or replaced without charge upon receipt of the unit prepaid at: CDN, PO Box 10947, Portland, OR 97296-0947. This warranty does not cover damage in shipment or failure caused by tampering, obvious carelessness or abuse.



Component Design Northwest, Inc.
PO Box 10947
Portland, OR 97296-0947
Tel 800 338-5594
Fax 800 879-2364
Web www.cdn-timeandtemp.com

