



THE TIME & TEMPERATURE COMPANY™


Direct Entry Timer & Clock

Counts 24 hours by minutes & seconds

Features

- Dual function
- Counts up & down
- Big digit
- Clock
- Direct entry
- Loud and long alarm
- Stop and restart
- Last count recall
- Counts up after zero
- Counts last min in seconds
- Brushed stainless steel finish
- International time
- 2-way mounting: magnet/stand
- Battery and instructions included

Note: Remove sticker from display before use.

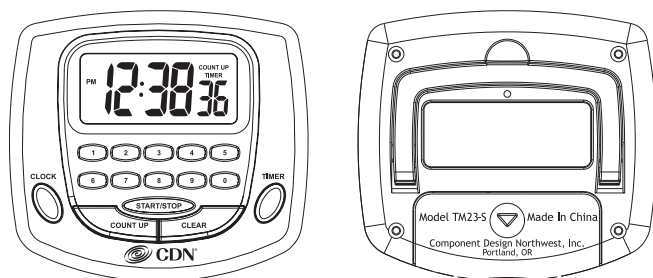

Note: In the following instructions, names of the control buttons are shown in CAPS. Function information that appears on the display is shown in **BOLD CAPS**.

Battery Installation

Replace battery when LCD becomes dim or alarm level declines.

1. Remove battery door in back by sliding down in direction of arrow.
2. Install 1.5V AAA battery observing polarity shown in compartment. The display shows all segments and a “beep” sounds.
3. Replace battery door.

Operating Instructions

A. Set Clock

1. Press, and hold the **CLOCK** button until **24 Hr** flashes. Press the **START/STOP** button to switch between 12 Hr and 24 Hr.
2. To set 12 Hr, AM/PM time, press the **CLOCK** button while **12 Hr** is flashing. **AM** will appear and will flash. To switch between AM and PM, press **START/STOP**.
3. To set AM time, press **CLOCK** while **AM** is flashing. Press **CLOCK** again, and the **first digit** will flash. To enter time, for example, 09:45:00, enter 0 9 4 5 0 0.
4. To set PM time, press **CLOCK** while **PM** is flashing. Press **CLOCK** again, and the first digit will flash. To enter time, for example, 11:30:00, enter 1 1 3 0 0 0.
5. To set 24 Hr time, press **CLOCK** while **24 Hr** is flashing. Press **CLOCK** again and enter the time directly. For example, to set 23:30:00, enter 2 3 3 0 0 0.
6. The clock will start automatically.
7. The Timer and/or Count Up function will operate even though the display in the **CLOCK** mode. To alert the user in this case, **TIMER** and/or **COUNT UP** will flash on the display as a reminder.

B. Count Down

1. Press the **TIMER** button.
2. **TIMER** will appear on the display.
3. Enter the time to be counted on the 1 – 0 keypad. For example, to count 3 minutes exactly, enter 3 0 0 for three minutes, zero seconds. To count 9 hours, 45 minutes and 30 seconds, enter 9 4 5 3 0.
4. Press **START/STOP** to start the count down. Press **START/STOP** button to interrupt the count. Press **START/STOP** button again to resume the count.
5. To clear the count before reaching zero, stop the count by pressing **START/STOP**. Then press the **CLEAR** button.

Note: The count must first be stopped to prevent accidental clearing of the display.
6. On reaching zero the alarm will sound for one minute, the display will flash and will start

to count up to indicate the overtime since reaching zero. The maximum overtime is 10 hours.

7. When START/STOP is pressed the amount of overtime will “freeze” on the display. When START/STOP is pressed a second time the original time counted will appear on the display. This Auto Recall feature is especially handy when doing repetitive counting since the time will not have to be reentered. To recount the time, press START/STOP.

C. Count Up

1. Press the COUNT UP button.
2. COUNT UP will appear on the display.
3. Press START/STOP to begin the count.
4. Press START/STOP button to interrupt the count. Press START/STOP button again to resume the count.
5. To clear the display, press START/STOP to stop the count then press CLEAR to reset the display to 00:00.

Care of Your Product

- Avoid exposing your timer to extreme temperatures, water or severe shock.
- Avoid contact with any corrosive materials such as perfume, alcohol or cleaning agents.
- Wipe clean with a damp cloth.

The information in this document has been reviewed and is believed to be accurate. However, neither the manufacturer nor its affiliates assume any responsibility for inaccuracies, errors or omissions that may be contained herein. In no event will the manufacturer or its affiliates be liable for direct, indirect, special, incidental or consequential damages arisen by using this product or resulting from any defect/omission in this document, even if advised of the possibility of such damages. The manufacturer and its affiliates reserve the right to make improvements or changes to this document and the products and services described at any time, without notice or obligation.



5-Year Limited Warranty: Any instrument that proves to be defective in material or workmanship within five years of original purchase will be repaired or replaced without charge upon receipt of the unit prepaid at: CDN, PO Box 10947, Portland, OR 97296-0947. This warranty does not cover damage in shipment or failure caused by tampering, obvious carelessness or abuse.



Component Design Northwest, Inc.
PO Box 10947
Portland, OR 97296-0947
Tel 800 338-5594
Fax 800 879-2364
Web www.cdn-timeandtemp.com

