



THE TIME &amp; TEMPERATURE COMPANY™


## Timer On a Rope

Counts 100 minutes by seconds

### Features

- Counts up & down
- Stopwatch
- Stop and restart
- Lock
- Last count recall
- ABS plastic
- 3-way mounting: pocket clip/magnet/rope
- Battery and instructions included

**Note:** Remove sticker from display before use.

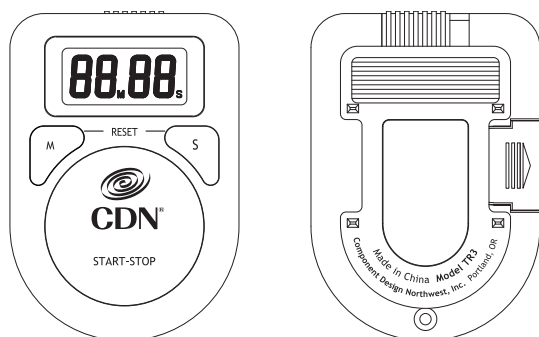

**Note:** In the following instructions, names of the control buttons are shown in CAPS. Function information that appears on the display is shown in **BOLD CAPS**.

### Battery Installation

Battery is installed. Remove plastic tab to allow power. Replace battery when LCD becomes dim or alarm level declines.

1. Remove battery cover on the back by sliding it in the direction of the arrow.
2. Install one LR44 battery, positive (+) side up.
3. Replace the battery cover until it clicks shut.

### Operating Instructions

#### A. Count Down

1. Slide switch on the top away from LOCK to allow time to be set.
2. Press the M and/or S buttons to enter the desired time. Press and hold for fast advance.
3. Slide switch on the top to LOCK to secure the desired time for recall.
4. Press the START/STOP button to start counting down. M and S flash on the display.
5. Press the START/STOP button to interrupt the count. Press START/STOP again to resume the count.
6. The alarm sounds for 30 seconds when the count reaches **00:00**.
7. Press START/STOP to stop the alarm. The last count is recalled.
8. When timer is unlocked and stopped, press both M and S buttons simultaneously to reset to **00:00**.

#### B. Count Up

1. When timer is unlocked and stopped, press both M and S buttons simultaneously to reset to **00:00**.
2. Press the START/STOP button to begin the count up. M and S flash on the display.
3. Press the START/STOP button to interrupt the count. Press START/STOP again to resume the count.
4. Press both M and S buttons simultaneously to reset to **00:00**.

### Care of Your Product

- Avoid exposing your timer to extreme temperatures, water or severe shock.
- Avoid contact with any corrosive materials such as perfume, alcohol or cleaning agents.
- Wipe clean with a damp cloth.

The information in this document has been reviewed and is believed to be accurate. However, neither the manufacturer nor its affiliates assume any responsibility for inaccuracies, errors or omissions that may be contained herein. In no event will the manufacturer or its affiliates be liable for direct, indirect, special, incidental or consequential damages arisen by using this product or resulting from any defect/omission in this document, even if advised of the possibility of such damages. The manufacturer and its affiliates reserve the right to make improvements or changes to this document and the products and services described at any time, without notice or obligation.



**5-Year Limited Warranty:** Any instrument that proves to be defective in material or workmanship within five years of original purchase will be repaired or replaced without charge upon receipt of the unit prepaid at: CDN, PO Box 10947, Portland, OR 97296-0947. This warranty does not cover damage in shipment or failure caused by tampering, obvious carelessness or abuse.



**Component Design Northwest, Inc.**  
PO Box 10947  
Portland, OR 97296-0947  
Tel 800 338-5594  
Fax 800 879-2364  
Web [www.cdn-timeandtemp.com](http://www.cdn-timeandtemp.com)

